


# Measuring Guide for Vertical Blinds

Double-check your work—always measure twice to ensure accuracy.

## Tools and Tips


- **Steel tape measure**—do not use cloth measuring tape
- **Pencil**
- **Measuring Worksheet**—see page 3
- **Measure each window** and record location on worksheet—size variances are common
- **Round measurements** to the nearest 1/8"
- **Clearly record measurements**—width vs. height

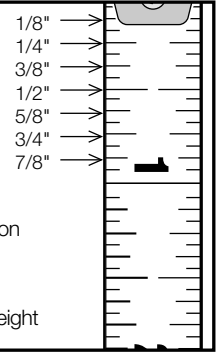


## Choose a Mount Type: Inside Mount or Outside Mount

(See next page if you need help deciding which mount is best for your windows.)


### Inside Mount Window treatments are installed inside the window casing.

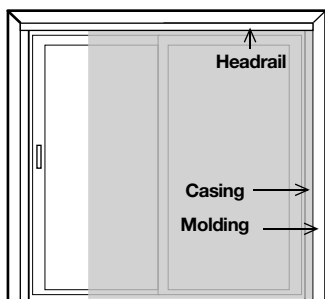


**Inside Mount Blind**

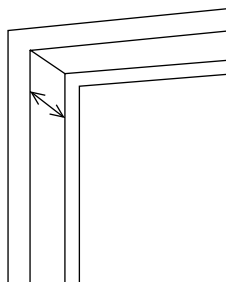

**Depth**

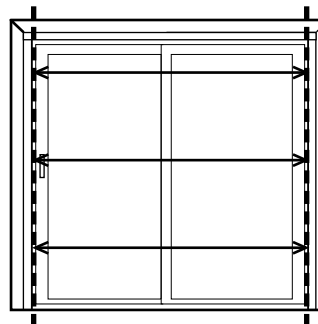

**Width**

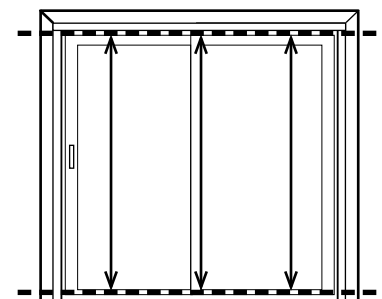


**Height**


- 1 **Measure Depth:** See chart on next page to determine if window casing has enough depth for an inside mount window treatment.
- 2 **Measure Width:** Measure the inside width of window casing in three places. Record narrowest measurement.
- 3 **Measure Height:** Measure the inside height from the top of window casing to top of sill (or to the floor for patio doors) in three places. Record shortest measurement.

**Note: Do not take any deductions for clearance. The manufacturer will take necessary deductions for a perfect fit.**


### Outside Mount Window treatments are installed outside the window casing. Mount directly to wall or molding.

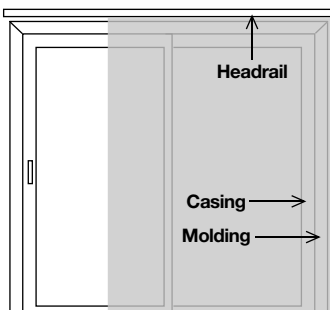


**Outside Mount Blind**

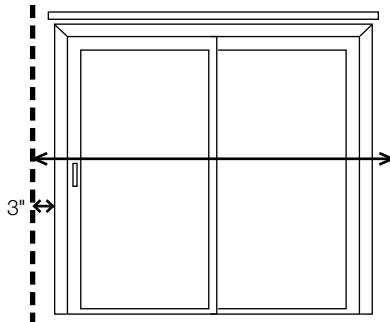

**Width**

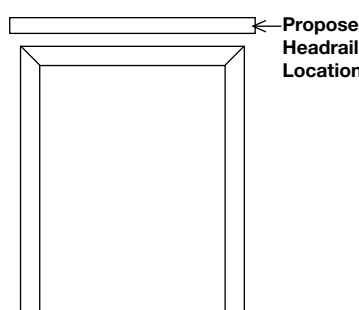

**Headrail Location**

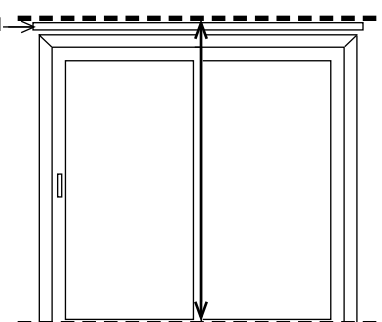

**Height**

- 1 **Measure Width:** Measure width of window. We recommend adding 3" on each side (6" total overlap) for optimum light control and privacy. If you want the entire window uncovered when the blind is fully open, you may need to add more than the recommended 6".
- 2 **Determine Headrail Location:** Determine headrail mounting position and mark the spot.
- 3 **Measure Height:** Measure height to be covered from top of headrail location to bottom edge or top of bottom sill if there is one. Record the measurement. Allow 3" for adequate mounting area above the window. If blind extends to the floor (e.g., to cover a patio door), measure height from the headrail to the floor, and deduct 1/2" for clearance in order for the vanes to clear the floor.

**Note: The manufacturer makes NO deductions on outside mount installations.**

# Mounting Considerations

## Reasons for Choosing Inside Mount

### Clean Look

- Inside mount treatments are installed inside the window casing, showcasing attractive window molding.
- The window opening frames the treatment for a finished, clean appearance.

### Allows Sill Space on Deep Windows

- In some deep-set windows, the window treatment can be installed to allow plants or other items to be placed in front of the window treatment on the sill.

## Limitations of Inside Mount

### Light Gaps

- A small deduction in the width and/or length is taken at the manufacturer to allow for proper operating clearance. This may cause a small gap on each side of the treatment, affecting the treatment's ability to darken a room.

### Obstructed View

- The stack (compressed portion of the window treatment when fully opened) will obstruct part of the view from the window. The amount of stack varies by product.

### Architectural Obstacles

- Obstacles such as handles and cranks can interfere with the operation of inside mount treatments.

## Reasons for Choosing Outside Mount

### Improve Privacy and Light Control

- Light gaps on the side of the window treatment can be substantially diminished or eliminated.

### Fewer Installation Limitations

- Outside mount window treatments are ideal for covering nonsquare windows.
- Outside mount window treatments can be configured so the vane stack is to the side of the window opening for an unobstructed view when fully opened.

### Architectural Obstacles

- Outside mount window treatments can clear obstacles like handles and cranks.

### Enlarge the Look of a Small Window

- Increase overlap above and below or to each side of the window.

### Hide Window Trim

- Outside mount treatments provide an easy way to hide unattractive window trim.

## Limitation of Outside Mount

### Required Surface Above Window Frame


- Outside mount brackets require at least 2" of flat surface above window for mounting brackets; projection brackets can be ordered if needed to clear frame or molding.

## Inside Mount Window Casing Minimum Depth Requirements

**A. Headrail Flush Mount:** If the window casing is deep enough to mount the entire headrail inside of it, this is called a headrail flush mount.

**B. Vane Flush Mount:** If the window casing is deep enough to mount the vanes flush with the window casing, this is called a vane flush mount.

**C. Valance Flush Mount:** If the window casing is deep enough to mount the valance flush with the window casing, this is called a valance flush mount.


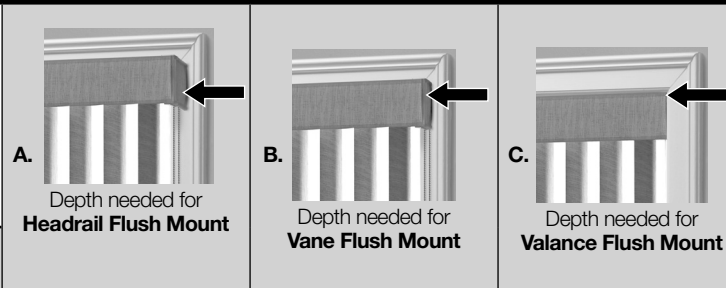


Vertical Blinds	Minimum Depth	A. Depth needed for Headrail Flush Mount	B. Depth needed for Vane Flush Mount	C. Depth needed for Valance Flush Mount
Duralite Headrail	2 <sup>3</sup> / <sub>8</sub> "	2 <sup>3</sup> / <sub>4</sub> "	3 <sup>3</sup> / <sub>4</sub> "	4 <sup>5</sup> / <sub>8</sub> "
Magnum Headrail	2 <sup>3</sup> / <sub>8</sub> "	2 <sup>1</sup> / <sub>16</sub> "	3 <sup>3</sup> / <sub>4</sub> "	4 <sup>5</sup> / <sub>8</sub> "
Wood Vertical Blind	2 <sup>3</sup> / <sub>8</sub> "	3"	3 <sup>3</sup> / <sub>4</sub> "	4 <sup>5</sup> / <sub>8</sub> "
Soft Vertical Blinds—No Valance	3 <sup>1</sup> / <sub>16</sub> "	4 <sup>3</sup> / <sub>16</sub> "	5 <sup>3</sup> / <sub>16</sub> "	7"

## Stack Options

The compressed portion of the window treatment when fully opened is called the stack. If you want the stack completely outside the window opening, please review the following stack chart. Contact Customer Service for more information about stack options.

Clear Opening (C.O.) = stack is completely outside the window. C.O. opening stack options:

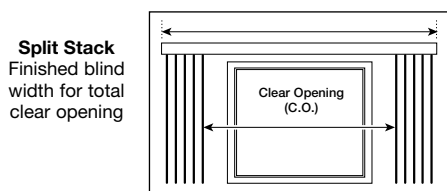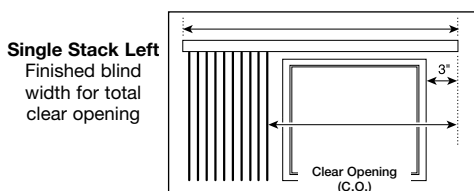

# Measuring and Ordering Worksheet

## Window #1

\_\_\_\_\_ (location)

### Measuring

#### For Inside Mount

Depth of window casing: \_\_\_\_\_

Measure width of window in three places and circle the narrowest width below:

Width #1: \_\_\_\_\_

Width #2: \_\_\_\_\_

Width #3: \_\_\_\_\_

Measure height of window in three places and circle the shortest height below:

Height #1: \_\_\_\_\_

Height #2: \_\_\_\_\_

Height #3: \_\_\_\_\_

#### For Outside Mount

Width: \_\_\_\_\_

Height: \_\_\_\_\_

### Ordering

Mount Type:  Inside  Outside

Ordering Width: \_\_\_\_\_

Ordering Height: \_\_\_\_\_

Type of Blind or Shade: \_\_\_\_\_

Style Name: \_\_\_\_\_

Color Number: \_\_\_\_\_

#### Controls & Options to consider:

Standard Cord and Chain Control

One Touch® Wand Control

Draw/Stack Position: \_\_\_\_\_

Cornice: \_\_\_\_\_

Valance: \_\_\_\_\_

Other: \_\_\_\_\_

## Window #2

\_\_\_\_\_ (location)

### Measuring

#### For Inside Mount

Depth of window casing: \_\_\_\_\_

Measure width of window in three places and circle the narrowest width below:

Width #1: \_\_\_\_\_

Width #2: \_\_\_\_\_

Width #3: \_\_\_\_\_

Measure height of window in three places and circle the shortest height below:

Height #1: \_\_\_\_\_

Height #2: \_\_\_\_\_

Height #3: \_\_\_\_\_

#### For Outside Mount

Width: \_\_\_\_\_

Height: \_\_\_\_\_

### Ordering

Mount Type:  Inside  Outside

Ordering Width: \_\_\_\_\_

Ordering Height: \_\_\_\_\_

Type of Blind or Shade: \_\_\_\_\_

Style Name: \_\_\_\_\_

Color Number: \_\_\_\_\_

#### Controls & Options to consider:

Standard Cord and Chain Control

One Touch® Wand Control

Draw/Stack Position: \_\_\_\_\_

Cornice: \_\_\_\_\_

Valance: \_\_\_\_\_

Other: \_\_\_\_\_

## Window #3

\_\_\_\_\_ (location)

### Measuring

#### For Inside Mount

Depth of window casing: \_\_\_\_\_

Measure width of window in three places and circle the narrowest width below:

Width #1: \_\_\_\_\_

Width #2: \_\_\_\_\_

Width #3: \_\_\_\_\_

Measure height of window in three places and circle the shortest height below:

Height #1: \_\_\_\_\_

Height #2: \_\_\_\_\_

Height #3: \_\_\_\_\_

#### For Outside Mount

Width: \_\_\_\_\_

Height: \_\_\_\_\_

### Ordering

Mount Type:  Inside  Outside

Ordering Width: \_\_\_\_\_

Ordering Height: \_\_\_\_\_

Type of Blind or Shade: \_\_\_\_\_

Style Name: \_\_\_\_\_

Color Number: \_\_\_\_\_

#### Controls & Options to consider:

Standard Cord and Chain Control

One Touch® Wand Control

Draw/Stack Position: \_\_\_\_\_

Cornice: \_\_\_\_\_

Valance: \_\_\_\_\_

Other: \_\_\_\_\_