

TASK: Correct Uneven Continuous Loop with Dust Cover Cellular and Pleated

Use If/When: Shade with color coordinated metal rail and white plastic cover does not hang evenly.

Tools Needed: Flathead Screwdriver, Tape

The internal components can move if the bottom rail is bumped when the shade is in the lowered position.

1. Use a carpenter's level to make sure the brackets, window and mounting surface are level.



2. Raise shade fully. Remove screw to release tensioner or cord locking guide at the bottom of the continuous loop.

Prior to March 5, 2012: 3/2/2012 to 8/18/2015:



Current cord guide/shell:

Inside Mount

Outside Mount



3. Remove shade from installation brackets using a flathead screwdriver. Insert tip of screwdriver between the back of the headrail and the bracket.



TASK: Correct Uneven Continuous Loop with Dust Cover Cellular and Pleated

Use If/When: Shade with color coordinated metal rail and white plastic cover does not hang evenly.

Tools Needed: Flathead Screwdriver, Tape

4. Remove dust cover, starting with top corner. Run flathead screwdriver across the top to separate it from the headrail. Place pressure on the back to remove.

Note: Do not remove the end caps.



5. Make sure cords are not twisted or tangled in the headrail. If needed, remove the plastic cover to adjust the cords.

If corrected, complete Steps 7 and 8.

If still uneven, complete Steps 6 - 12.


Tangled Cords



Untangled Cords



6. If the C-clips are not positioned evenly in the headrail, slide the clip away from the cradle to raise the shade or toward the cradle to lower the shade.

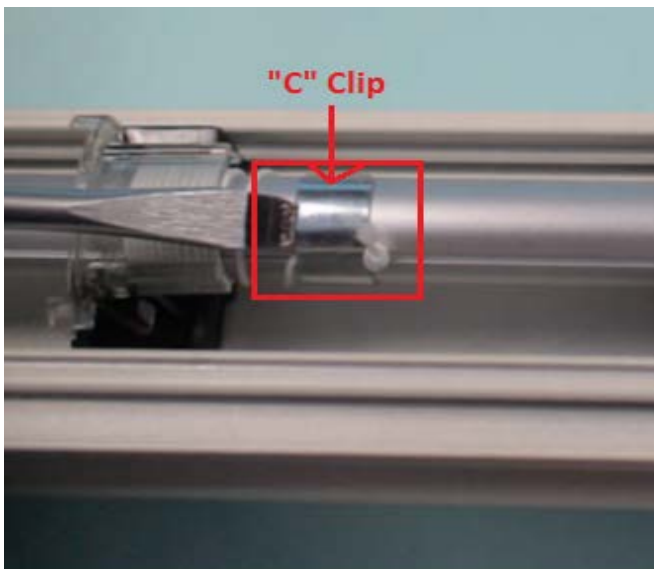

7. Replace dust cover. Replace shade in the brackets by attaching the front of the shade to the front of the brackets. Push on the shade until it snaps into place.



TASK: Correct Uneven Continuous Loop with Dust Cover Cellular and Pleated

Use If/When: Shade with color coordinated metal rail and white plastic cover does not hang evenly.

Tools Needed: Flathead Screwdriver, Tape

8. Mount the tensioner or cord locking guide depending on manufacturing date as previously installed.

Prior to March 5, 2012:



3/2/2012 to 8/18/2015:



Current cord guide/shell:

Inside Mount




Outside Mount



9. Remove one end cap from the bottomrail.



10. Slide aluminum slat from bottomrail. Placing a piece of tape on the end of the aluminum slat makes it easier to slide.

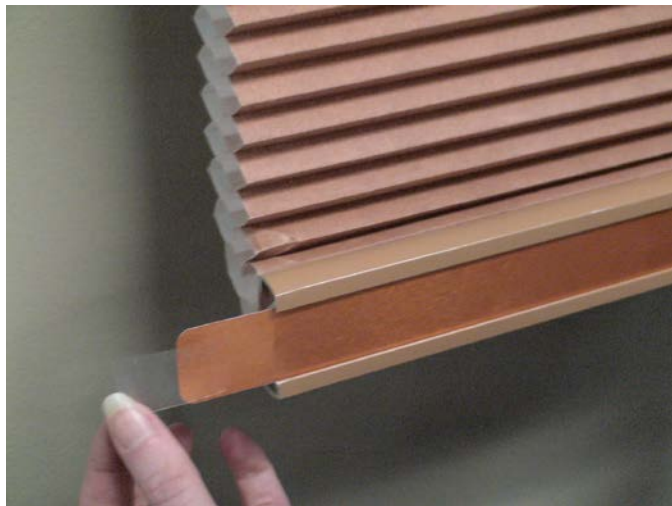

11. Locate the cord on the side of the shade that is lower. Retie knot in cord so the shade is even in length.



TASK: Correct Uneven Continuous Loop with Dust Cover Cellular and Pleated

Use If/When: Shade with color coordinated metal rail and white plastic cover does not hang evenly.

Tools Needed: Flathead Screwdriver, Tape

12. Replace aluminum slat and end cap being careful not to dent the aluminum slat. Hint: Placing a piece of tape on the end of the aluminum slat makes it easier to slide



13. Raise and lower the shade several times to ensure proper operation.

